

Install guide of Magnetic Sensitive Sensor

SHANGHAI SHEN LAN



Advise to install several sensors at same time. It will save time. Gluewater must be used up in 7 minutes after be mixed.



1

Choose the install position, and begin drill hole with diameter 100cm, depth 80~100mm




2

Remove dust in the hole, and blow dry with electric dryer.



3

Insert small stones in the hole, the top shall be under ground 70~80mm.

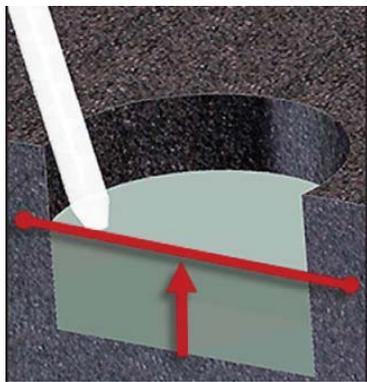

4

Insert mixed Special Gluewater into the hole, thickness is half depth.



5

Insert sensor into hole (with outer plastic shield). The paper side is upside. Arrow point to vehicle's move direction. The sensor's top shall be under ground 20~30mm.



6

After 5 minutes, fill all the hole. Wait 10~15 minutes, the Gluewater is dry. Remove dust on the ground.

Install guide of Special Gluewater



1



Open the package.(Use up it in 1 day)

Warning

- 1) Keep careful, don't break package when open package and mix.
- 2) For better hardness after installed, Gluewater shall be fully mixed.
- 3) When Gluewater is mixed, it will release heat. You shall feel warm. After 7 minutes, it will be hotter.
- 4) After construction, all dust shall be cleaned.

2



Remove the middle sealing strip.

3

Mixed the black part and transparent part fully, use up it in 7 minutes.

Note: When temperature is over 20 degrees, please use up it in 3 minutes!!

